

Recommended Service Intervals

Mechanical Seal Oil	ISO 32 Turbine Oil	250Hrs
Bearing Frame Oil	ISO 32 Turbine Oil	250Hrs
Vacuum Pump Oil	ND SAE 30 WT Oil	250Hrs
Transmission Oil	SAE 40 WT Oil	1000Hrs
Coupler-Transmission	KOP-Flex Grease	500Hrs

Transmission, first oil change after 50 Hrs, and then every 1000 Hrs or every 6 months.

Coupler needs to be checked every 500 Hrs, add grease at that time. At 1000 Hrs clean, inspect for wear, and install new KOP-Flex grease at that time.